


Ref#	Part #	Description
1	101!142	Mounting Bracket, 128mm, Zinc Die Cast,
2	132!320	Canopy, 130mm, WH, Slim Line, 2
3	127!442	Downrod, WH, 4.5", Die Cast Ball
4	109!418	Blade Ring, BK, 3MO52 / 3MTR38
5	131!447	Blade, White ABS / White ABS, 3MO52
6	G168	Glass/Matte Opal
7	160!010	Halogen, 75w, E-11, Frost, JDE-11
8	102!730	Hardware Pack, WH, 3MO52/3MTR38, WH
9	100!092	Hand Remote Cover, White
10	100!102	Convertible, No Reverse, Down Light
11	100!087	Wall Trim Plate, Almond
12	100!088	Wall Trim Plate, White
13	100!013	Receiver, 3MO/3MTR

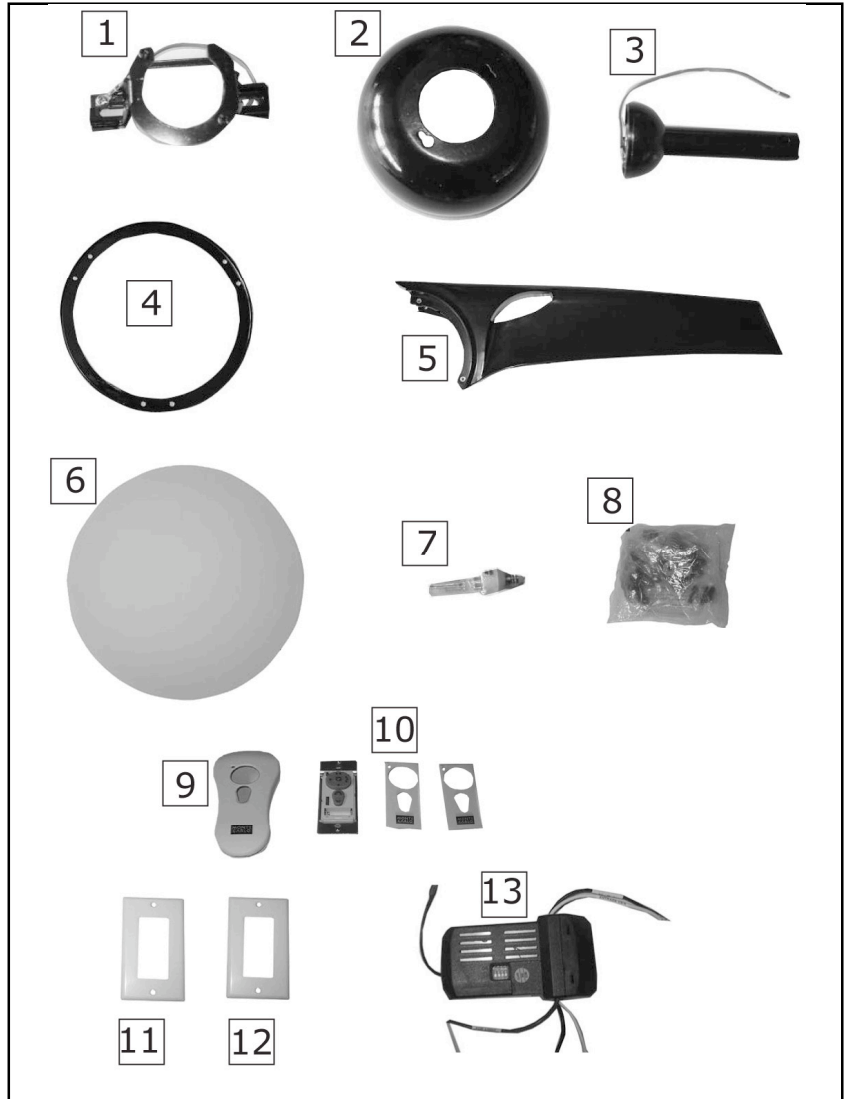

Note: Not all numbers shown on the graphic are listed. Parts listed are loose parts included with the fan and switches with the exception of bulbs.

**Glass Broken? Missing Parts? Need Help?**  
**Verre brisé? Pièces manquantes? Besoin d'aide?**

Call our customer service center, Monday - Friday from 8:00 a.m. to 5:00 p.m. CST at 1-800-888-8888 (+)  
 Appeler notre centre de service au consommateur, ouvert de lundi - vendredi de 8:00 a.m. à 5:00 p.m. HCN  
 (Heure centrale normale) à 1-800-888-8888 (+)

Fan Model Number: (Printed on your product packaging) 3MO52WHO-L

NUMÉRO DE MODÈLE DU VENTILATEUR: (IMPRIMÉ SUR L'EMBALLAGE DE VOTRE PRODUIT) 3MO52WHO-L

# Operation & Maintenance

## Operation

Turn on the power and check operation of fan.

Speed settings for warm or cool weather depend on factors such as room size, ceiling height and number of fans.

The slide switch controls direction, forward or reverse.


**Warm weather** - (Forward) Fan turns in a counterclockwise direction. A downward air flow creates a cooling effect as shown in Illustration A. This allows you to set your air conditioner on higher temperature settings without affecting your comfort.

**Cool weather** - (Reverse) Fan turns in a clockwise direction. An upward air flow moves warm air off the ceiling area as shown in Illustration B. This allows you to set your heating unit on lower settings without affecting your comfort.

**Note:** Turn off and wait for fan to stop before changing the setting on the forward/reverse slide switch.

## Maintenance

1. Because of the fan's natural movement, some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure.
2. Clean your fan periodically to help maintain its new appearance for years. Do not use water while cleaning. This could damage the motor, or the wood, or possibly cause electrical shock.
3. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer coating to minimize discoloration or tarnishing.
4. There is no need to oil your fan. The motor has permanently lubricated bearings.

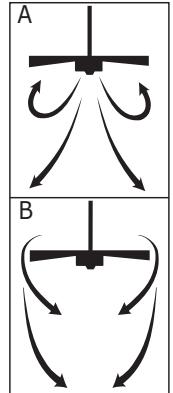

# Fonctionnement & Entretien

## Fonctionnement

Ouvrir le courant et vérifier le fonctionnement du ventilateur.

Les réglages pour temps chaud ou froid dépendent de différents facteurs comme la taille de la pièce, la hauteur du plafond et le nombre de ventilateurs.

Le bouton glissière commande la marche avant ou arrière.

**Température chaude** - (Marche avant) Le ventilateur de plafond livre la direction de counterclockwise. Un courant d'air vers le bas crée un effet de refroidissement tel que montre sur l'illustration A. Ceci vous permet de régler votre unité d'air climatisé à un réglage plus élevé sans affecter votre confort.

**Température froide** - (Marche arrière) Le ventilateur de plafond livre la direction de clockwise. un courant d'air vers le haut crée de déplacer l'air chaud du plafond tel que montre sur l'illustration B. Ceci vous permet de régler votre unité de chauffage à un réglage plus bas sans affecter votre confort.

**Remarque:** Fermer le courant et attendre que le ventilateur soit arrêté avant de changer le réglage du sectionneur coulissant de marche avant/marche arrière.

## Entretien

1. A cause de mouvement naturel du ventilateur, certaines connexions peuvent se desserrer. Vérifier les connexions de support, les attaches, et les attaches de pales deux fois l'an. S'assurer qu'elles sont solides.
2. Nettoyer votre ventilateur régulièrement afin d'aider à la conservation de son apparence pour des années. Ne pas utiliser d'eau lors de nettoyage. Ceci pourrait endommager le moteur, ou le bois, ou même causer un choc électrique.
3. N'utiliser qu'une brosse douce ou un linge sans charpie afin d'érailler le fini. Le plaquage est scellé avec un recouvrement de laque pour minimiser la décoloration ou le ternissement.
4. Il n'est pas nécessaire d'huiler votre ventilateur. Le moteur a des coussinets lubrifiés en permanence.